




WARNING:


Common installation mistakes that can void your 7-year Warranty

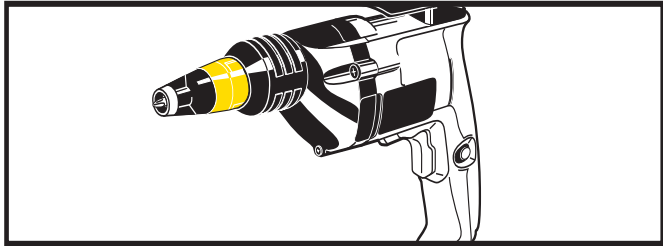


Must use screw driver/gun with operable clutch for consistent screw depth setting. For best results use stand-up screw gun.




Do not use screw driver/gun with no clutch or a broken clutch.

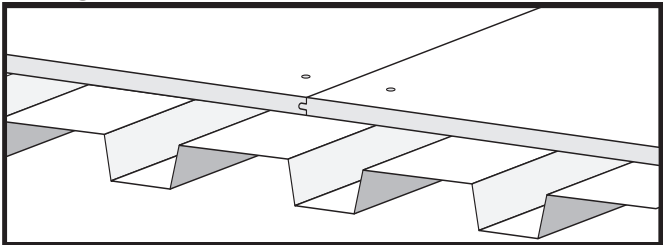

Panels must meet on high points (ribs) of corrugated B-decking.

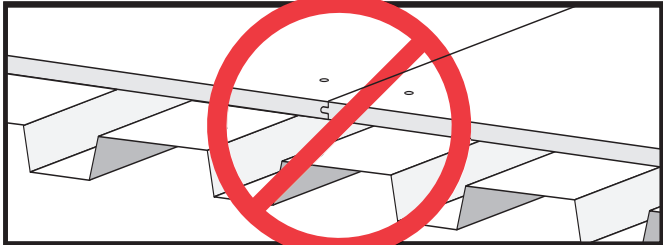


Do not place panel edges on top of corrugated B-decking low points (valley).

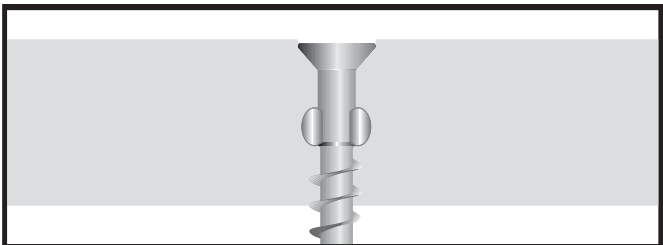


Approved screws must be placed just below the panel surface.



Do not place approved screws too high or too low in the panels.

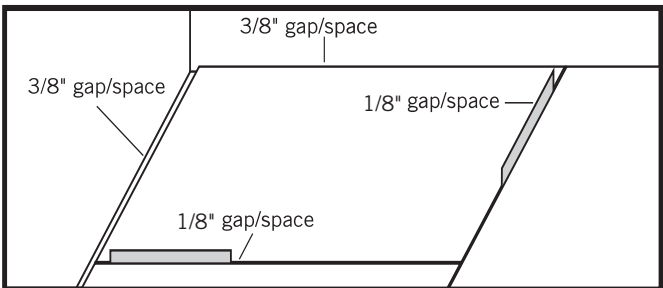

Use 1/8" metal spacers between panels for correct spacing. 3/8" space/gap on outer edges (perimeter).

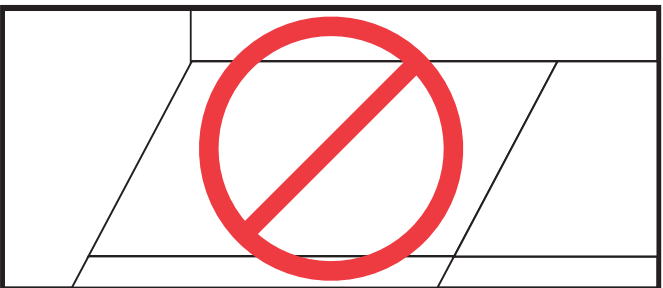

Do not install panels without 3/8" gap/space on outer edges of panel and 1/8" gap/space between panels.

Detailed ResinDek installation instructions are on the back of this page and should be reviewed prior to starting installation of all ResinDek Products.

FAILURE TO INSTALL RESINDEK® AS INSTRUCTED WILL VOID ALL WARRANTIES

©2010 Cornerstone Specialty Wood Products, LLC™
All rights reserved. Cornerstone Specialty Wood Products, LLC, the Cornerstone logo, the 7-year warranty logo, ResinDek, The Panel of Experts, Xspan, Diamond Seal and Invisi-Loc are trademarks of Cornerstone Specialty Wood Products, LLC™.



CORNERSTONE
SPECIALTY WOOD PRODUCTS, LLC™

10179 Wayne Avenue | Cincinnati, OH 45215

Toll Free: 888.755.3048

Tel: 513.772.5560 | Fax: 513.772.5561

www.resindek.com